

## Popup & Hazard Switch Vintage Style

### Installation Manual



Stainless vintage style panel with toggle switches for the hazard switch and retractable headlights lock switch.


### Installation procedure

#### 1. Remove the Tombstone.

The center stack (aka. Tombstone) is held with two screws behind the vent louvers and one at the bottom. To reach the bottom screw, the center console needs to be removed. It detaches by unscrewing both screws at the front side, the one underneath the ashtray and two inside the armrest.

#### 2. Mount the Hazard Switch.

- The Hazard Switch comes with pre-mounted rear washers. Remove the brackets and position them on the back of the tombstone as shown in the pictures below:

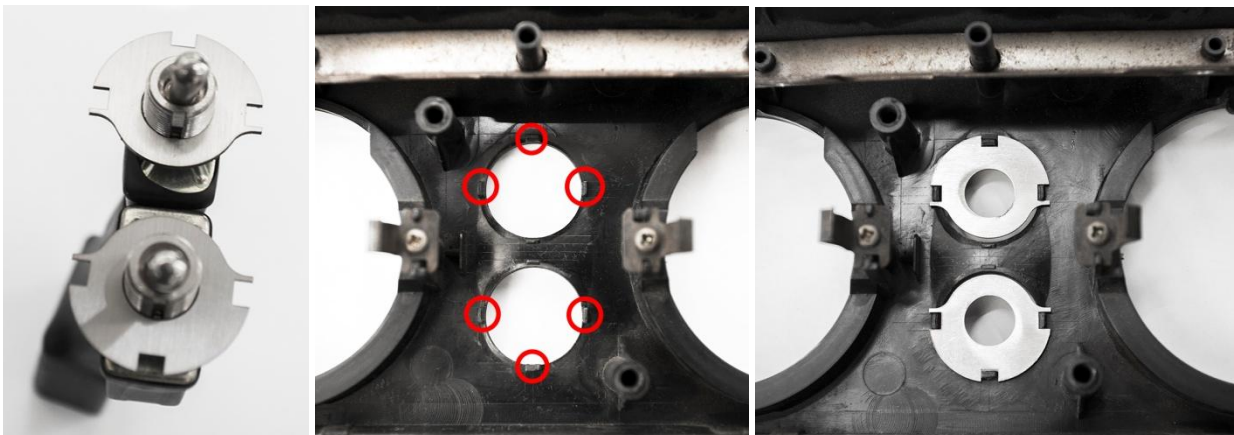


- There is a nut on each switch. Position them approximately 1mm from the bottom of the key.



- Mount the switches by pushing them through the cutouts of the brackets, placing the Hazard Switch Plate and tightening them with the knurled nuts. When tightened, the knurled nuts should be zeroed with the top side of the switches.

*Important: When mounting the Hazard Switch, the slots on the switches must face downwards.*

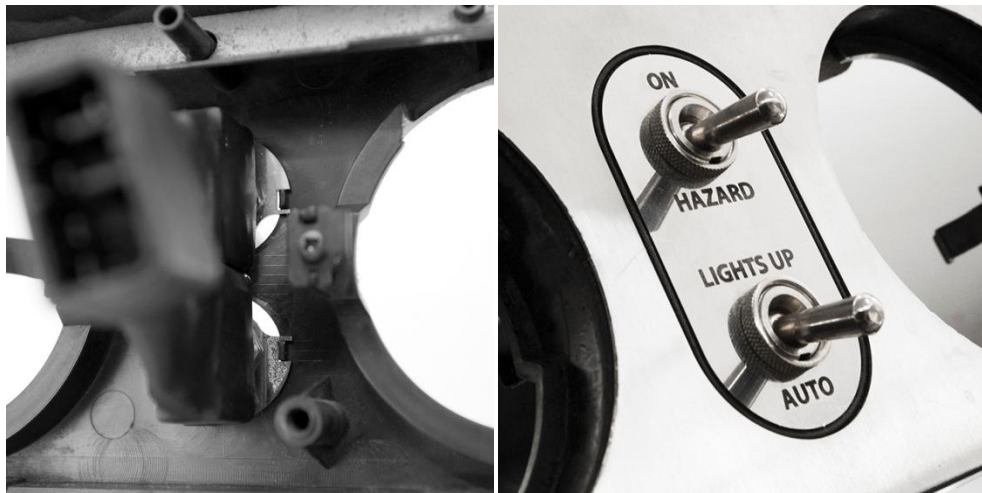

- Mount back the tombstone and connect the Hazard Switch:

